
 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Text	 Text / Goto	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Back	 Back / Return
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 CH+	 CH+ / Page+	 Blue	 Blue / Prime Video / Random
 0	 0	 SAT	 Shift + 0
 Vol+	 Vol+	 EPG	 Guide / EPG / -/-
 CH-	 CH- / Page-	 List	 Smart / List
 Tv/R	 TV/Radio /	 Audio	 Audio / Lang I/II





Original	Replacement
Sub	Subtitle / EQ
Pup	Shift + CH+ /
Pup	>> / Preset+
FAV+	>> / Tune+
Info	Info / Angle
Zoom	Zoom / Size
Pdn	Shift + CH- /
Pdn	<< / Preset-
FAV	Fav / Marker / PC
FAV-	<< / Tune-

Original	Replacement

