 



 











 



 

 


 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Replacement
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Display	 Display / Media
 CH-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 OK	 OK





Original		Replacement		Original		Replacement	
	Exit		Exit / Cancel / Clear		Timeshift		Smart / List
	Subtitle		Subtitle / EQ		Tv/Radio		TV/Radio /
	Index		Info / Angle				
	Size		Zoom / Size				
	Reveal		D.Menu / Top				
	Mix		Setup / OPT /				
	Play		Play / Slow				
	Pause/Hold		Pause / Step / Freeze				
	I<</Cancel		I<< / Preset-				
	>>I/Subpage		>>I / Preset+				
	EPG		Guide / EPG / -/--				
	FAV		Fav / Marker / PC				
	Stop		Stop / Hold				
	<</FAV-		<< / Tune-				
	>>/FAV+		>> / Tune+				
	Media	+	Shift + Display / Media				
	Rec		Rec / Rec Mode				

