







Original	Replacement
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 +100	 Pre Ch
 Display	 Info
 Sleep	 Sleep
 A.P.S.	 Media
 Clock/Timer	 AV

Original	Replacement
 Menu/Bluetooth Setting	 Menu
 Gt.AMP Mode	 D. Menu
 Cancel	 Exit
 Up	 Up
 Down	 Down
 >>/>>I	 >>
 I<</<<	 <<
 SET	 Ok
 Tuner	 TV/R
 Audio In	 3D
 Play/Pause	 Red
 Play/Pause CD	 Play
 Play/Pause iPod	 Green
 Play/Pause Bluetooth	 Pause
 Play/Pause Metronome	 Yellow
 Stop	 Stop
 FM Mode	 Format





Original		Replacement		Original	Replacement
	Play Mode	 + 	Shift + Play		
	Repeat		Text		
	Sound Mode		Dual		
	Rec/Delete		Rec		
	Rec Speed		Blue		
	Rec Mode	 + 	Shift + Rec		
	Treble+		Ch +		
	Treble-		Ch -		
	Bass+		Right		
	Bass-		Left		
	Super Woofer Volume+	 + 	Shift + Vol +		
	Super Woofer Volume-	 + 	Shift + Vol -		
	Vol+		Vol +		
	Vol-		Vol -		
	Muting		Mute		

