 

 





 

 
 




 


 





 



 

 












 
 
 
 
 


 
 

 
 

 







 

 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	Quick		Shift + Pre Ch
	ECO		Shift + 3D
	List		List
	Vol+		Vol +
	Vol-		Vol -
	AD		Shift + Subt
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Guide		Guide
	Exit		Exit
	Back		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original	Replacement
0	0
[i+]	DISPLAY INFO
Recall	FAV PRE-CH
[≡+]	SETTINGS OPT
[≡◆]	SHIFT + PICTURE FORMAT
Play	PLAY MODE
<<	<<
>>	>>
<<	<<
>>	>>
Stop	Stop
Rec	REC MODE
Pause/Step	Pause
[≡?]	E-MANUAL D.MENU
[O]/[≡X]	SHIFT + TIMER AV
Text	REPEAT TEXT
3D	ECO 3D

Original	Replacement
[v]	HOME SMART
[>]	PROG SLEEP
-> [ / ] <-	SHIFT + REPEAT TEXT
V.Format	PICTURE FORMAT
Audio I/II	SOUND DUAL
More Info	SHIFT + DISPLAY INFO
Subtitle	AD SUBT

