




 

 
 




 





 


 
 

 











 


 


 












	Original	Replacement		Original	Replacement
	Power		Power		Up
	Mute		Mute		Down
	CD/SD/USB		Smart		Right
	AUX/BT		3D		Left
	Radio		TV/R		Ok
	1		1		Play
	2		2		Pause
	3		3		Vol +
	4		4		Vol -
	5		5		Audio/DSC
	6		6		Back
	7		7		X/INT
	8		8		Stop
	9		9		Stereo
	0		0		Timer/Prog
	Display		Info		Shift + Sleep
	*/Menu		Menu		AV
					Media





Original	Replacement	Original	Replacement
SLEEP S	PROG SLEEP Sleep		

