












 






 



 





























 

 
 

 











 











 



 

 

 

 

 

 

 



 





 



Original	Replacement	Original	Replacement
Guide	 Guide / EPG / -/--	 Play	 Play / Slow
 Power	 Power	 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red/Goto	 Red / Netflix / Search	 D.Setup	 Setup / OPT /
 Green/Angle	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Repeat	 Yellow / YouTube / Repeat	 Stop	 Stop / Hold
 Blue/A-B	 Blue / Prime Video / Random	 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC	 >>I/Index	 >>I / Preset+
 Text	 Text / Goto	 Menu	 Menu / Home
 Freeze/Hold	 Shift + Pause / Step /	 Lang/Audio	 Audio / Lang I/II
 D.Menu	 D.Menu / Top	 Up	 Up
 Subtitle	 Subtitle / EQ	 Left	 Left
 Zoom/Size	 Zoom / Size	 OK	 OK
 Aspect	 Shift + Picture / Format	 Right	 Right
 Subpage	 Info / Angle	 Sleep	 Sleep / Timer
 Media	 Shift + Display / Media	 Down	 Down

Original	Replacement	Original	Replacement
Guide	 Guide / EPG / -/--	 Play	 Play / Slow
 Power	 Power	 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red/Goto	 Red / Netflix / Search	 D.Setup	 Setup / OPT /
 Green/Angle	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Repeat	 Yellow / YouTube / Repeat	 Stop	 Stop / Hold
 Blue/A-B	 Blue / Prime Video / Random	 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC	 >>I/Index	 >>I / Preset+
 Text	 Text / Goto	 Menu	 Menu / Home
 Freeze/Hold	 Shift + Pause / Step /	 Lang/Audio	 Audio / Lang I/II
 D.Menu	 D.Menu / Top	 Up	 Up
 Subtitle	 Subtitle / EQ	 Left	 Left
 Zoom/Size	 Zoom / Size	 OK	 OK
 Aspect	 Shift + Picture / Format	 Right	 Right
 Subpage	 Info / Angle	 Sleep	 Sleep / Timer
 Media	 Shift + Display / Media	 Down	 Down





Original	Replacement
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--

Original	Replacement
 0	 0
 Back	 Back / Return
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

