




















 

 
 
 











 


















 





 







Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Energy		Display / Media		TTX		Text / Goto
	Picture		Picture / Format		0		0
	Sound		Sound / Title		Recall		Back / Return
	Mute		Mute / Dimmer		Menu		Menu / Home
	Audio		Audio / Lang I/II		Up		Up
	Subtitle		Subtitle / EQ		Input		AV / Input / RDS
	16:9/4:3		Shift + Zoom /		Left		Left
	Sleep		Sleep / Timer		OK		OK
	1		1		Right		Right
	2		2		Exit		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		Info		Info / Angle
	5		5		Vol+		Vol+
	6		6		Home		Shift + Menu /
	7		7		EPG/Hold		Guide / EPG / -/-
	8		8		CH+		CH+ / Page+



