


 

 







 

 



 


















| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  PR + |  Up |
|  Mute |  Mute |  PR - |  Ch - |
|  1 |  1 |  PR - |  Down |
|  2 |  2 |  Vol + |  Vol + |
|  3 |  3 |  Vol + |  Right |
|  4 |  4 |  Vol - |  Vol - |
|  5 |  5 |  Vol - |  Left |
|  6 |  6 |  OK |  Ok |
|  7 |  7 |  SWAP |  Back |
|  8 |  8 |  16:9 |  Format |
|  9 |  9 |  White / i |  Info |
|  0 |  0 |  Red |  Red |
|  --/-- |  GUIDE |  Green |  Green |
|  AV / TV |  TV/R |  Yellow |  Yellow |
|  Menu |  Menu |  Blue |  Blue |
|  TXT |  Text |  Stop |  Stop |
|  PR + |  Ch + |  Reveal |  Smart |

| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  PR + |  Up |  TV |  AUX |
|  PR - |  Ch - |  DVD |  SAT |
|  PR - |  Down |  SLEEP |  REC MODE |
|  Vol + |  Vol + |  DISC NAV |  PLAY MODE |
|  Vol + |  Right |  LIST |  DUAL |
|  Vol - |  Vol - |  SOUND |  AD |
|  Vol - |  Left |  SETTINGS |  SUBT |
|  OK |  Ok |  OPT |  ECO |
|  SWAP |  Back |  PROG |  PICTURE |
|  16:9 |  Format |  SLEEP |  3D |
|  White / i |  Info |  E-MANUAL |  TIMER |
|  Red |  Red |  D.MENU |  AV |
|  Green |  Green |  TOP MENU |  DISPLAY INFO |
|  Yellow |  Yellow |  MENU |  OK |
|  Blue |  Blue |  CLEAR |  RETURN BACK |
|  Stop |  Stop |  EXIT |  BACK |
|  Reveal |  Smart |  HOME |  + CH |



