
 
























Original	Replacement
 3D	 Picture / Format
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog+	 CH+ / Page+
 0	 0
 Vol+	 Vol+
 Prog-	 CH- / Page-
 Vol-	 Vol-

Original	Replacement
 Up/CH+	 Up
 Left/Vol-	 Left
 OK	 OK
 Right/Vol+	 Right
 Down/CH-	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--
 List	 Smart / List
 TXT	 Text / Goto
 S-T	 Sound / Title
 Tv/R	 TV/Radio /
 Timer	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	←		Back / Return
	<<		<< / Tune-
	Red		Red / Netflix / Search
	>>		>> / Tune+
	Green		Green / APP / Repeat
	l<<		l<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>l		>>l / Preset+
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

