



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Nicam/A2	 Shift + Audio / Lang I/II	 1	 1
 Sleep	 Sleep / Timer	 2	 2
 Aspect	 Shift + Picture / Format	 3	 3
 Media	 Shift + Display / Media	 4	 4
 Display	 Display / Media	 5	 5
 Auto	 Smart / List	 6	 6
 P.Mode	 Picture / Format	 7	 7
 S.Mode	 Sound / Title	 8	 8
 DTV	 D.Menu / Top	 9	 9
 Source	 AV / Input / RDS	 0	 0
 Up	 Up	 -/--	 Shift + Guide / EPG / -/--
 Left	 Left	 Recall	 Back / Return
 Enter	 OK	 CH+	 CH+ / Page+
 Right	 Right	 Info	 Info / Angle
 Down	 Down	 Audio	 Audio / Lang I/II





Original	Replacement	Original	Replacement
	Vol+		Vol+
	CH-		CH- / Page-
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /
	Vol-		Vol-
	Text		Text / Goto
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Index		Setup / OPT /
	<</Hold		<< / Tune-
	<</Hold		Shift + Stop /
	Size		Zoom / Size
	>>		>> / Tune+
	I<</Reveal		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	Rec/Repeat		Rec / Rec Mode
	Rec/Repeat		Shift + Green / APP /
	T-Shift		Eject / Surround
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random

