

 



 































 








 



 














 





| Original | | Replacement | | Original | | Replacement | |
|-------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------|---------------------------|---------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|----------------------------|
|  | Power |  | Power |  | Menu |  | Menu / Home |
|  | Mute |  | Mute / Dimmer |  | Exit |  | Exit / Cancel / Clear |
|  | Nicam/A2 |  | Shift + Audio / Lang I/II |  | 1 |  | 1 |
|  | Sleep |  | Sleep / Timer |  | 2 |  | 2 |
|  | Aspect |  | Shift + Picture / Format |  | 3 |  | 3 |
|  | Media |  | Shift + Display / Media |  | 4 |  | 4 |
|  | Display |  | Display / Media |  | 5 |  | 5 |
|  | Auto |  | Smart / List |  | 6 |  | 6 |
|  | P.Mode |  | Picture / Format |  | 7 |  | 7 |
|  | S.Mode |  | Sound / Title |  | 8 |  | 8 |
|  | DTV |  | D.Menu / Top |  | 9 |  | 9 |
|  | Source |  | AV / Input / RDS |  | 0 |  | 0 |
|  | Up |  | Up |  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | Left |  | Left |  | Recall |  | Back / Return |
|  | Enter |  | OK |  | CH+ |  | CH+ / Page+ |
|  | Right |  | Right |  | Info |  | Info / Angle |
|  | Down |  | Down |  | Audio |  | Audio / Lang I/II |



