




 




 
 

 





 
 
 


















 
 

 
 


 

 

 

 






 


 










Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	HDMI		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	CH List		List
	Menu		Menu
	Guide		Guide
	Smart Hub		Smart
	Tools		Options
	Info		Info
	Back/Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red





Original		Replacement		Original	Replacement
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Family Story		Media		
	Search		TV/R		
	P.Size		Format		
	Support		Eject		
	D		3D		
	AD/Subt.		Subt		
	<<		<<		
	I<<		I<<		
	Pause		Pause		
	>>		>>		
	>>I		>>I		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

