 









 

 

 










 

 

 







 

 

 

 

 

 

 

 

 

 



 
 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Timer	 Sleep / Timer
 Blue / Timer	 Blue / Prime Video / Random
 Format	 Picture / Format
 RES.	 Display / Media
 TTX	 Text / Goto
 I<<	 I<< / Preset-
 S - T	 Sound / Title
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold

Original	Replacement
 Rec	 Rec / Rec Mode
 Play / Pause	 Pause / Step / Freeze
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 PVR List	 Smart / List
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK
 EPG	 Guide / EPG / -/-
 Info	 Info / Angle
 CH +	 CH+ / Page+
 CH -	 CH- / Page-
 TV / RAD	 TV/Radio /
 Audio	 Audio / Lang I/II
 Vol +	 Vol+





Original		Replacement		Original		Replacement	
	Vol -		Vol-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	FAV		Fav / Marker / PC				
	Recall		Back / Return				

