


 

 
 





 
 

 















 

 

 

 



 

 

 

 











 





































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV / ATV	 D.Menu / Top
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Vol +	 Vol+
 MTS	 Audio / Lang I/II
 CH +	 CH+ / Page+
 Vol -	 Vol-
 RECLIST	 Smart / List
 CH -	 CH- / Page-
 FAV List	 Fav / Marker / PC
 REC	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol+		Vol+
	MTS		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	RecList		Smart / List
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down



