



 







































 



























| Original | | Replacement | | Original | | Replacement | |
|---|--------|---|--------------------------|---|---------|---|-----------------------|
|  | Power |  | Power |  | V - |  | Vol- |
|  | Mute |  | Mute / Dimmer |  | Home |  | Shift + Menu / |
|  | 1 |  | 1 |  | CH - |  | CH- / Page- |
|  | 2 |  | 2 |  | Menu |  | Menu / Home |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | Source |  | AV / Input / RDS |
|  | 5 |  | 5 |  | Left |  | Left |
|  | 6 |  | 6 |  | Enter |  | OK |
|  | 7 |  | 7 |  | Right |  | Right |
|  | 8 |  | 8 |  | Exit |  | Exit / Cancel / Clear |
|  | 9 |  | 9 |  | Down |  | Down |
|  | List |  | Smart / List |  | Display |  | Display / Media |
|  | 0 |  | 0 |  | P.Mode |  | Picture / Format |
|  | Recall |  | Back / Return |  | S.Mode |  | Sound / Title |
|  | V + |  | Vol+ |  | Sleep |  | Sleep / Timer |
|  | Aspect |  | Shift + Picture / Format |  | MTS |  | Shift + Smart / List |
|  | CH + |  | CH+ / Page+ |  | Rec |  | Rec / Rec Mode |





| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Guide |  Guide / EPG / -/-- |  CAP |  Shift + Display / Media |
|  Red |  Red / Netflix / Search |  Subtitle |  Subtitle / EQ |
|  Green |  Green / APP / Repeat |  TV / Radio |  TV/Radio / |
|  Yellow |  Yellow / YouTube / Repeat |  FAV |  Fav / Marker / PC |
|  Blue |  Blue / Prime Video / Random |  Size / Mouse |  Zoom / Size |
|  << / Index |  << / Tune- |  Hold / Refresh |  Stop / Hold |
|  << / Index |  Shift + << / | | |
|  Play/Pause / |  Shift + Play / | | |
|  Play/Pause / |  Pause / Step / Freeze | | |
|  Play/Pause / |  Play / Slow | | |
|  >> / TTX |  >> / Tune+ | | |
|  >> / TTX |  Shift + >> / | | |
|  I<< / Sub.Pg |  Shift + I<< / Preset- | | |
|  I<< / Sub.Pg |  I<< / Preset- | | |
|  >>I / Reveal |  >>I / Preset+ | | |
|  Stop / Mix |  Shift + Rec / Rec Mode | | |
|  Stop / Mix |  Shift + Stop / | | |

Hold

