



Original	Replacement
Standby	Power
Lock	Green / APP / Repeat
Menu	Home / Menu
Timer On/Off	Sleep / Timer
Audio Out	Mute / Dimmer
Skip Search	Red / Netflix / Search
Zero Back	Back / Return
Clear	Exit / Cancel / Clear
Up	Up
Set	OK
SV/V+/Timer/Showview	Picture / Format
Down	Down
Right	Right
Left	Left
Display	Display / Media
1	1
Mode OSD	Info / Angle

Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Input Select	AV / Input / RDS
<<	<< / Tune-
Play	Play / Slow
-/--/AM/PM	Guide / EPG / -/--
>>	>> / Tune+
Rec	Rec / Rec Mode
Channel+	CH+ / Page+
Channel-	CH- / Page-



