















 





 



 

 





















































Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Original	Replacement	Original	Replacement
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Down	 Down	 Vol +	 Vol+
 Vol +	 Vol+	 Menu	 Menu / Home
 Menu	 Menu / Home	 CH +	 CH+ / Page+
 CH +	 CH+ / Page+	 Vol -	 Vol-
 Vol -	 Vol-	 Source	 AV / Input / RDS
 Source	 AV / Input / RDS	 CH -	 CH- / Page-
 CH -	 CH- / Page-	 Info	 Info / Angle
 Info	 Info / Angle	 Sleep	 Sleep / Timer
 Sleep	 Sleep / Timer	 Recall	 Back / Return
 Recall	 Back / Return	 L / R	 Eject / Surround
 L / R	 Eject / Surround	 Index / Play	 Play / Slow
 Index / Play	 Play / Slow	 Index / Play	 Display / Media
 Index / Play	 Display / Media		





Original	Replacement	Original	Replacement
 Zoom / Pause	 Zoom / Size	 Green / Subtitle	 Green / APP / Repeat
 Zoom / Pause	 Pause / Step / Freeze	 Yellow / Fav	 Fav / Marker / PC
 Reveal / Stop	 Stop / Hold	 Yellow / Fav	 Yellow / YouTube / Repeat
 Reveal / Stop	 Setup / OPT /	 Blue / EPG	 Guide / EPG / -/-
 TTX	 Text / Goto	 Blue / EPG	 Blue / Prime Video / Random
 Hold / I<<	 I<< / Preset-		
 Hold / I<<	 Shift + Stop /		
 List / >>I	 >>I / Preset+		
 List / >>I	 Smart / List		
 Language / <<	 << / Tune-		
 Language / <<	 Audio / Lang I/II		
 Save / >>	 >> / Tune+		
 Save / >>	 Shift + Rec / Rec Mode		
 Red / Radio / Rec	 Rec / Rec Mode		
 Red / Radio	 Red / Netflix / Search		
 Red / Radio / Rec	 TV/Radio /		
 Green / Subtitle	 Subtitle / EQ		

