






 





 

 




 
 

 







 




 



 



 



 





 

 






 
 






Original	Replacement	Original	Replacement
 Standby	 Power	 TV / Radio	 TV/R
 Mute	 Mute	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Record	 Rec
 8	 8	 Stop	 Stop
 9	 9	 Vol +	 Vol +
 0	 0	 Vol -	 Vol -
 Info	 Info	 TTX	 Text
 Recall	 Back	 FAV	 Pre Ch
 EPG	 Guide	 CH +	 Ch +
 Audio	 Dual	 CH -	 Ch -
 Subtitle	 Subt	 Media	 Media





	Original	Replacement	Original	Replacement
	I<< Prev	 I<<		
	Play	 Play		
	<< Rew	 <<		
	USB	 Smart		
	>>  Next	 >>		
	Pause	 Pause		
	>> Fwd	 >>		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

