


 



 





 

 




 
 

 







 
 




 





 







 



 

 



 


 
 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 TV / Radio	 TV/R
 Mute	 Mute	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Record	 Rec
 8	 8	 Stop	 Stop
 9	 9	 Vol +	 Vol +
 0	 0	 Vol -	 Vol -
 Info	 Info	 TTX	 Text
 Recall	 Back	 FAV	 Pre Ch
 EPG	 Guide	 CH +	 Ch +
 Audio	 Dual	 CH -	 Ch -
 Subtitle	 Subt	 Media	 Media





	Original	Replacement	Original	Replacement
	I<< Prev		I<<	
	Play		Play	
	<< Rew		<<	
	USB		Smart	
	>>I Next		>>I	
	Pause		Pause	
	>> Fwd		>>	
	Red		Red	
	Green		Green	
	Yellow		Yellow	
	Blue		Blue	

