



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	EQ		Subtitle / EQ
	Zoom		Zoom / Size
	TV-Mode		TV/Radio /
	Setup		Setup / OPT /
	L/R		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Reset		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Treb+		CH+ / Page+
	Vol-		Vol-
	OSD		Display / Media
	Treb-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Replacement	Original	Replacement
7	7		
8	8		
9	9		
10+	Guide / EPG / -/--		
0/10	0		
P/N	Fav / Marker / PC		
Repeat	Green / APP / Repeat		
Sub-	Yellow / YouTube / Repeat		
Sub+	Blue / Prime Video / Random		
Slow	Shift + Play /		
A1	Shift + 1		
A2	Shift + 2		
B1	Shift + 3		
B2	Shift + 4		
C1	Shift + 5		
C2	Shift + 6		
D1	Shift + 7		

Original	Replacement	Original	Replacement
D2	Shift + 8		
E1	Shift + 9		
E2	Shift + Guide / EPG / -/--		
E3	Shift + 0		
E4	Shift + Fav / Marker / PC		

