






 

 

 



 
 


 



 













 





 



 


 
 



 
















Original	Replacement	Original	Replacement
 Standby	 Power	 Tv/Radio	 TV/R
 Source	 AV	 Display	 Info
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0/10	 0	 Mute	 Mute
 FAV/Program	 Pre Ch	 EPG	 Guide
 Recall/10+	 Back	 Media	 Media
 P.Mode	 Format	 CH+	 Ch +
 S.Mode	 Shift + Dual	 CH-	 Ch -
 Sleep	 Sleep	 Rec	 Rec





Original	Replacement	Original	Replacement
T.Shift	Smart	Green/A-B	Green
I/II/Audio	Dual	Yellow/Angle	Yellow
Size/Aspect	3D	Blue/Repeat	Blue
D.Setup	Options		
D.Menu	D. Menu		
Title	Text		
Eject	Eject		
Play	Play		
Pause/Hold	Pause		
Stop/Reveal	Stop		
<</Text	<<		
>>/Subpage	>>		
I<</Index	I<<		
>>I/Mix	>>I		
Zoom	Shift + Eject		
Subtitle	Subt		
Red/Goto	Red		

