 



 
 

 

 
 






 



 




 
 
 
 
 
 
 
 





 


 

 











Original	Replacement	Original	Replacement
 Power	 Power	 RED / SUB.T	 Subt
 Mute	 Mute	 Green / Txt	 Green
 Play / Pause	 Play	 Green / Txt	 Text
 Play / Pause	 Pause	 Yellow / Timer	 Yellow
 Stop	 Stop	 Yellow / Timer	 Shift + AV
 I> Step	 Shift + Pause	 Blue / Audio	 Blue
 Rec / B.Mark	 Rec	 Blue / Audio	 Dual
 << / F1	 <<	 Menu	 Menu
 >> / F2	 >>	 Exit	 Exit
 I<< / F3	 I<<	 Up	 Up
 >>I / F4	 >>I	 Right	 Right
 OPT	 Options	 Down	 Down
 EPG / Seek	 Guide	 Left	 Left
 FAV / Repeat	 Shift + Text	 OK	 Ok
 FAV / Repeat	 Pre Ch	 Recall	 Back
 SAT / (A-B)	 AV	 Info	 Info
 RED / SUB.T	 Red	 Vol +	 Vol +





Original	Replacement	Original	Replacement
 Vol -	 Vol -	 VF	VF
 APPS	 Smart	 TV / Radio	TV / Radio
 APPS	 Shift + Media		
 USB	 Media		
 CH + / Page +	 Ch +		
 CH - / Page -	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0 / Zoom	 0		
 0 / Zoom	 Eject		

Original	Replacement	Original	Replacement
 Format	 Format		
 TV/R	 TV/R		

