

 



 





 



 


 




 



 




 




 











 


















| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Standby |  Power |  Right |  Right |
|  Info |  Info / Angle |  Vol+ |  Vol+ |
|  Subtitle |  Subtitle / EQ |  Record |  Rec / Rec Mode |
|  Mute |  Mute / Dimmer |  CH- |  CH- / Page- |
|  I<< |  I<< / Preset- |  Down |  Down |
|  Play |  Play / Slow |  Stop |  Stop / Hold |
|  << |  << / Tune- |  1 |  1 |
|  >>I |  >>I / Preset+ |  2 |  2 |
|  Pause |  Pause / Step / Freeze |  3 |  3 |
|  >> |  >> / Tune+ |  EPG |  Guide / EPG / -/- |
|  Menu |  Menu / Home |  4 |  4 |
|  Up |  Up |  5 |  5 |
|  CH+ |  CH+ / Page+ |  6 |  6 |
|  Exit |  Exit / Cancel / Clear |  Back |  Back / Return |
|  Vol- |  Vol- |  7 |  7 |
|  Left |  Left |  8 |  8 |
|  OK |  OK |  9 |  9 |





 



 





 



 







 



 





 





 










 

















| Original | | Replacement | |
|----------|----------|-------------|-----------------------------|
| | 0 | | 0 |
| | Media | | Display / Media |
| | USB | + | Shift + 8 |
| | Tv/Radio | | TV/Radio / |
| | Audio | | Audio / Lang I/II |
| | TTX | | Text / Goto |
| | Timer | | Sleep / Timer |
| | FAV | | Fav / Marker / PC |
| | Res | | Smart / List |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Replacement | |
|----------|--|-------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Standby |  Power |  Right / Vol+ |  Vol+ |
|  Info |  Info / Angle |  Right / Vol+ |  Right |
|  Subtitle |  Subtitle / EQ |  Record |  Rec / Rec Mode |
|  Mute |  Mute / Dimmer |  Down / CH- |  Down |
|  I<< |  I<< / Preset- |  Down / CH- |  CH- / Page- |
|  Play |  Play / Slow |  Stop |  Stop / Hold |
|  << |  << / Tune- |  1 |  1 |
|  >>I |  >>I / Preset+ |  2 |  2 |
|  Pause |  Pause / Step / Freeze |  3 |  3 |
|  >> |  >> / Tune+ |  EPG |  Guide / EPG / -/- |
|  Menu |  Menu / Home |  4 |  4 |
|  Up / CH+ |  CH+ / Page+ |  5 |  5 |
|  Up / CH+ |  Up |  6 |  6 |
|  Exit |  Exit / Cancel / Clear |  Back |  Back / Return |
|  Left / Vol- |  Vol- |  7 |  7 |
|  Left / Vol- |  Left |  8 |  8 |
|  OK |  OK |  9 |  9 |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------------|
|  | 0 |  | 0 |
|  | Media |  | Display / Media |
|  | USB |  | Shift + 8 |
|  | TV / Radio |  | TV/Radio / |
|  | Audio |  | Audio / Lang I/II |
|  | TTX |  | Text / Goto |
|  | Timer |  | Sleep / Timer |
|  | Fav |  | Fav / Marker / PC |
|  | Res. |  | Smart / List |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

