



| Original | Replacement |
|--|---|
|  Standby |  Power |
|  Source |  AV / Input / RDS |
|  Home |  Shift + Menu / |
|  e |  D.Menu / Top |
|  Mouse |  Info / Angle |
|  TV / Radio |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Display |  Display / Media |
|  0 |  0 |

| Original | Replacement |
|---|--|
|  Recall |  Back / Return |
|  Recall |  Fav / Marker / PC |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |
|  Down |  Down |
|  Stop |  Stop / Hold |
|  Vol + |  Vol+ |
|  TXT |  Text / Goto |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Mute |  Mute / Dimmer |



