


 

 

 

 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Info	 Info / Angle
 DMP	 D.Menu / Top
 Up	 Up
 EPG	 Guide / EPG / -/--

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Fav	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Index	 Display / Media
 Recall	 Back / Return
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-



 







 



 

 

 

 

 



 











 





 

 







 

 

 

 
 










Original	Replacement
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	Blue / Prime Video / Random
Blue / >>I	>>I / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [≡X]	Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green 		
	>> 		
	Yellow 		
	I<< 		
	Blue 		
	>> 		
	Play 		
	Pause 		
	[≡] 		
	Stop/Still 		
	[≡+] 		
	[≡o]/Subtitle 		
	[≡◆]/[+] 		
	[≡x] 		
	Radio 		
	Audio 		
	Rec 		

