



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

 







 



 

 

 

 

 



 

















 

 







 

 

 





 
 








Original		Replacement		Original	Replacement
	Green / >>		>> / Tune+		
	Green / >>		Green / APP / Repeat		
	Yellow / I<<		I<< / Preset-		
	Yellow / I<<		Yellow / YouTube / Repeat		
	Blue / >>I		Blue / Prime Video / Random		
	Blue / >>I		>>I / Preset+		
	Text / Play/Pause		Text / Goto		
	Text / Play/Pause		Pause / Step / Freeze		
	Text / Play/Pause		Play / Slow		
	Stop / Still		Stop / Hold		
	Timer / Subtitle		Subtitle / EQ		
	Size / Aspect		Zoom / Size		
	Cancel [=X]		Shift + Exit / Cancel / Clear		
	Radio		TV/Radio /		
	Audio / I/II		Audio / Lang I/II		
	Rec		Rec / Rec Mode		





Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





	Original	Replacement	Original	Replacement
	Green	Green / APP / Repeat		
	>>	>> / Tune+		
	Yellow	Yellow / YouTube / Repeat		
	I<<	I<< / Preset-		
	Blue	Blue / Prime Video / Random		
	>>I	>>I / Preset+		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	[≡]	Text / Goto		
	Stop/Still	Stop / Hold		
	[≡+]	Picture / Format		
	[≡o]/Subtitle	Subtitle / EQ		
	[≡◆]/[+]	Zoom / Size		
	[≡x]	Setup / OPT /		
	Radio	TV/Radio /		
	Audio	Audio / Lang I/II		
	Rec	Rec / Rec Mode		

