

 

 

 

 



 



 



 










 
 







 



 

 

 

 



 



 










 





 

 

 
 

 

 

 


 
 

 

 





 

 

 



Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Info / Angle
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		Aspect		Shift + Picture / Format
	4		4		CH -		CH- / Page-
	5		5		Guide		Guide / EPG / -/-
	6		6		Home		Shift + Menu / Home
	7		7		Rec		Rec / Rec Mode
	8		8		Menu		Menu / Home
	9		9		Up		Up
	List		Smart / List		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Replacement
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 >> / TTX	 >> / Tune+
 >> / TTX	 Text / Goto
 I<< / SUB.PG	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Mix	 Stop / Hold
 CAP	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 TV / Radio	 TV/Radio /

Original	Replacement
 FAV	 Fav / Marker / PC
 Size / Mouse	 Zoom / Size
 Hold / Refresh	 Shift + Stop /



Program