

 











 








 


 





















 



 

 












Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	List	Smart / List
8	8	Vol -	Vol-
9	9	Fav	Fav / Marker / PC
Source	AV / Input / RDS	Sleep	Sleep / Timer
0	0	EPG	Guide / EPG / -/-
Audio I/II	Audio / Lang I/II	Recall	Back / Return
Menu	Menu / Home	Red / <<	<< / Tune-
Exit	Exit / Cancel / Clear	Red / <<	Red / Netflix / Search








 


























 



 







 







 

 

 













Original	Replacement	Original	Replacement
 Green / >>>	 >>> / Tune+		
 Green / >>>	 Green / APP / Repeat		
 Yellow / I<<<	 I<<< / Preset-		
 Yellow / I<<<	 Yellow / YouTube / Repeat		
 Blue / >>>I	 >>>I / Preset+		
 Blue / >>>I	 Blue / Prime Video / Random		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Play / Slow		
 Text / Play/Pause	 Pause / Step / Freeze		
 Stop / Still	 Stop / Hold		
 Radio	 TV/Radio /		
 Size / Aspect	 Picture / Format		
 Size / Aspect	 Zoom / Size		
 [≡x]	 Eject / Surround		
 Subtitle / [≡o]	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		






Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





Original	Replacement
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 [=]	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=+]	 Shift + Stop /
 Stop/Still	 Stop / Hold
 Radio	 TV/Radio /
 [=♦]/[++]	 Zoom / Size
 [=x]	 Eject / Surround
 [=o]/Subtitle	 Subtitle / EQ
 DMP	 D.Menu / Top
 Rec	 Rec / Rec Mode

Original	Replacement

