










 



 
















 













Original	Replacement
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV/TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 D.Menu / Top
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Menu	 Menu / Home
 Vol+	 Vol+

Original	Replacement
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Replacement	Original	Replacement
	·		Quick Start
	0		Setup / OPT /
	Recall		
	Picture		
	Sound		
	I/II		
	Mute		
	Sleep		
	Info		
	Zoom		
	Freeze		
	EPG		
	FAV List		
	FAV ADD		
	FAV >>I		
	Subtitle		
	Time		
			TV/Radio /
			0
			Back / Return
			Picture / Format
			Sound / Title
			Audio / Lang I/II
			Mute / Dimmer
			Sleep / Timer
			Info / Angle
			Zoom / Size
			Pause / Step / Freeze
			Guide / EPG / -/--
			Fav / Marker / PC
			I<< / Preset-
			>>I / Preset+
			Subtitle / EQ
			Shift +
			Sleep / Timer

