



Original	Replacement
System Off	Power
TV	Shift + 1
Disc	Shift + 2
Radio	Shift + 3
AUX	Shift + 4
Video	Shift + 5
D-IN	Shift + 6
USB1	Shift + 7
USB 2	Shift + 8
PC	Shift + 9
Presets + / Pic +	Ch +
Presets - / Pic -	Ch -
Info	Info
Mute	Mute
Subtitle	Subt
Audio	Dual
Volume +	Vol +

Original	Replacement
Volume -	Vol -
Set-Up Menu	Menu
Disc Menu / Teletext	D. Menu
Disc Menu / Teletext	Text
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Status / Mix	Smart
OSD	Media
Red / Playlist	Red
Green / Random	Green
Yellow / Repeat	Yellow
Blue / Angle	Blue
Yellow / Repeat	Shift + Text
Red / Playlist	List





Original	Replacement	Original	Replacement
1	1	<< Search/Slow	<<
2	2	>> Search/Slow	>>
3	3	Play	Play
4	4	Title	+ Shift + Info
5	5	Stop	Stop
6	6	Pause / Freeze	Pause
7	7		
8	8		
9	9		
0	0		
Clear	Exit		
Zoom	+ Shift + Eject		
A-B	+ Shift + Play		
Screen Format	Format		
Open	Eject		
I<< Previous/Step	I<<		
>>I Next/Step	>>I		

