 





 





 
















 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Timer	 Blue / Prime Video / Random
 Format	 Picture / Format
 RES.	 AV / Input / RDS
 TTX	 Text / Goto
 S-T	 Subtitle / EQ
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Rec	 Rec / Rec Mode
 PVR List	 Smart / List
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/--
 Down	 Down
 Info	 Info / Angle
 CH +	 CH+ / Page+
 TV / Rad	 TV/Radio /
 Vol +	 Vol+
 CH -	 CH- / Page-
 Audio	 Audio / Lang I/II
 Vol -	 Vol-





Original		Replacement	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return

Original	Replacement

