









Original		Replacement		Original		Replacement	
	VHS Power		Power		9		9
	Audio		Dual		0		0
	TV Power		Shift + Power		-/-- / ≥10		Guide
	TV AV		Shift + AV		Cancel / Reset		Exit
	TV CH +		Shift + Ch +		CH + / Tracking/V-Lock +		Ch +
	TV CH -		Shift + Ch -		CH - / Tracking/V-Lock -		Ch -
	TV Volume +		Vol +		Input		Media
	TV Volume -		Vol -		Repeat		Text
	Operation Select VHS		Smart		I<< Index/Skip		I<<
	1		1		>>I Index/Skip		>>I
	2		2		<< REW		<<
	3		3		>> FF		>>
	4		4		Stop		Stop
	5		5		Pause / Slow		Pause
	6		6		Play		Play
	7		7		Menu / Play List		Menu
	8		8		Menu / Play List		List









 

Original	Replacement
	+
	+
	+

Original	Replacement





Original	Replacement
 DVD Power	 Power
 Audio	 Dual
 TV Power	 Shift + Power
 TV AV	 Shift + AV
 TV CH +	 Shift + Ch +
 TV CH -	 Shift + Ch -
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 Operation Select DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 -/-- / ≥10	 Guide
 Cancel / Reset	 Exit
 Repeat	 Text
 I<< Index/Skip	 I<<
 >>I Index/Skip	 >>I
 << REW	 <<
 >> FF	 >>
 Stop	 Stop
 Pause / Slow	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 Shift + Menu
 Direct Navigator / Top Menu	 D. Menu
 Menu / Play List	 Menu
 Up	 Up
 Left	 Left





Original	Replacement	Original	Replacement
Enter	Ok		
Right	Right		
Down	Down		
Functions	Options		
Return / Exit	Back		
Setup	Shift + Options		
DVD-RAM	Format		
DVD Status	Info		
A / Quick OSD	Red		
B / Quick Replay	Green		
Manual Skip	3D		

