 

 

 

 

 

 

 

 



 

 



 
 




 







Original	Replacement
 Sleep	 Sleep / Timer
 Standby AV	 Shift + Power
 System Standby	 Power
 Video1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 Top Menu	 Shift + D.Menu / Top Menu
 1 Tuner	 1
 Up	 Up
 2 Tuner	 2
 DVD Menu	 D.Menu / Top
 3 Tuner	 3
 Left	 Left
 4 Tuner	 4

Original	Replacement
 Enter	 OK
 5 Tuner	 5
 Right	 Right
 6 Tuner	 6
 7 Tuner	 7
 Down	 Down
 8 Tuner	 8
 Recall	 Fav / Marker / PC
 9 Tuner	 9
 >10 Tuner/Shift/-/-	 Guide / EPG / -/-
 0 Tuner	 0
 Enter/D.Tuning/Return Tuner	 Back / Return
 I<</CH/Preset-	 I<< / Preset-
 I<</CH Preset-Tuner	 Shift + I<< / Preset-
 >>I/CH/Preset+	 >>I / Preset+
 >>I/CH Preset+ Tuner	 Shift + >>I / Preset+
 Tv/Video/ANT	 AV / Input / RDS





Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 2CH	 Sound / Title
 A.F.D.	 Eject / Surround
 Movie/Music	 Audio / Lang I/II
 Test Tone	 Subtitle / EQ
 Main Menu	 Menu / Home
 Multi CH	 Picture / Format
 < Menu	 Shift + Left
 Menu >	 Shift + Right
 Muting	 Mute / Dimmer
 -	 CH- / Page-
 +	 CH+ / Page+

Original	Replacement
 Master Vol+	 Vol+
 Tv Vol+	 Shift + Vol+
 Tv CH+	 Shift + CH+ /
 Master Vol-	 Vol-
 Tv Vol-	 Shift + Vol-
 Tv CH-	 Shift + CH- /





 

 

 
 




 

 

 

 

 







 

 





Original	Replacement
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Replacement
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





 

 

 
 




 

 

 

 

 







 

 





Original	Replacement
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 CD	 1
 1 Video 1	 Shift + 1
 2 CD	 2
 2 Video 1	 Shift + 2
 3 CD	 3
 3 Video 1	 Shift + 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

Original	Replacement
 5 Video 1	 Shift + 5
 6 CD	 6
 6 Video 1	 Shift + 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 8
 8 Video 1	 Shift + 8
 9 CD	 9
 9 Video 1	 Shift + 9
 >10/Shift/-/ CD	 Guide / EPG / -/ -
 >10/Shift/-/ Video 1	 Shift + Guide / EPG / -/ -
 0 CD	 0
 0 Video 1	 Shift + 0
 Enter/D.Tuning/Return CD	 Back / Return
 Enter/D.Tuning/Return Video 1	 Shift + Back / Return
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-





Original	Replacement
 Standby	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 MD/Tape	 1
 1 Video 2	 Shift + 1
 2 MD/Tape	 2
 2 Video 2	 Shift + 2
 3 MD/Tape	 3
 3 Video 2	 Shift + 3
 4 MD/Tape	 4
 4 Video 2	 Shift + 4
 5 MD/Tape	 5

Original	Replacement
 5 Video 2	 Shift + 5
 6 MD/Tape	 6
 6 Video 2	 Shift + 6
 7 MD/Tape	 7
 7 Video 2	 Shift + 7
 8 MD/Tape	 8
 8 Video 2	 Shift + 8
 9 MD/Tape	 9
 9 Video 2	 Shift + 9
 >10/Shift/-/- MD/Tape	 Guide / EPG / -/-
 >10/Shift/-/- Video 2	 Shift + Guide / EPG / -/-
 0 MD/Tape	 0
 0 Video 2	 Shift + 0
 Enter/D.Tuning/Return MD/Tape	 Back / Return
 Enter/D.Tuning/Return Video 2	 Shift + Back / Return
 I<< MD/Tape	 I<< / Preset-
 I<< Video 2	 Shift + I<< / Preset-



