
 
 



 



















































 













| Original  |         | Replacement   |                    | Original  |             | Replacement   |                       |
|---|---------|---|--------------------|---|-------------|---|-----------------------|
|    | Power   |    | Power              |    | V.Menu      |    | D.Menu / Top          |
|    | Input   |    | AV / Input / RDS   |    | Menu        |    | Menu / Home           |
|    | Display |    | Display / Media    |    | Vol -       |    | Vol-                  |
|    | P.STD   |    | Picture / Format   |    | P +         |    | CH+ / Page+           |
|    | Mute    |    | Mute / Dimmer      |    | Vol +       |    | Vol+                  |
|    | 1       |    | 1                  |    | P -         |    | CH- / Page-           |
|    | 2       |    | 2                  |    | << REW      |    | << / Tune-            |
|    | 3       |    | 3                  |    | Stop        |    | Stop / Hold           |
|    | 4       |    | 4                  |    | Play        |    | Play / Slow           |
|   | 5       |   | 5                  |   | >> FF       |   | >> / Tune+            |
|  | 6       |  | 6                  |  | Rec         |  | Rec / Rec Mode        |
|  | 7       |  | 7                  |  | Eject       |  | Eject / Surround      |
|  | 8       |  | 8                  |  | Pause / P/S |  | Pause / Step / Freeze |
|  | 9       |  | 9                  |  | Crystal PB  |  | Smart / List          |
|  | -/--    |  | Guide / EPG / -/-- |  | TRK Up      |  | >>  / Preset+         |
|  | 0       |  | 0                  |  | TRK Up      |  | Up                    |
|  | Pre-CH  |  | Back / Return      |  | Index       |  | Info / Angle          |





| Original   | Replacement   | Original | Replacement |
|--|---|----------|-------------|
|  Memory   |  OK                    |          |             |
|  Sleep    |  Sleep / Timer         |          |             |
|  TRK Down |  Down                  |          |             |
|  TRK Down |  I<< / Preset-         |          |             |
|  Lang Sel |  Audio / Lang I/II     |          |             |
|  Clear    |  Exit / Cancel / Clear |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |
|  |   |          |             |

