



 



 


 

 

 
 

 


 

 





 

 




 


 
 
 
 
 
 


 



 







 

 

 











Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play
 1	 1	 Stop	 Stop
 2	 2	 Up Play/Slow	 Up
 3	 3	 Down Play/Slow	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 >>	 >>
 7	 7	 <<	 <<
 8	 8	 Index	 Info
 9	 9	 Eject	 Eject
 0/AV	 0	 Cancel	 Exit
 CHTR+	 Ch +	 Timer Rec	 AV
 CHTR-	 Ch -	 Showview/Progra	 Sleep
 Rec/OTR	 Rec	 Call	 Pre Ch
 Pause/Still	 Pause	 Clock/Counter	 Guide
 Enter	 Ok	 Counter Reset	 Media
 Menu	 Menu	 Zero/Return	 Back





Original	Replacement	Original	Replacement
 Speed SP/LP	 Format		
 Tv/VCR	 TV/R		
 Audio Select	 Dual		

