 














 





Original	Replacement
 Power	 Power
 Tv/AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/-	 Shift + Guide / EPG / -/-
 0	 0
 Back	 Back / Return
 Vol+	 Vol+
 Scan	 Smart / List
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Zoom	 Zoom / Size
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Mute	 Mute / Dimmer
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Picture / Format
 Green / Sound	 Green / APP / Repeat
 Green / Sound	 Sound / Title
 Yellow / Sleep	 Yellow / YouTube / Repeat
 Yellow / Sleep	 Sleep / Timer
 Blue / Call	 Blue / Prime Video / Random





Original	Replacement
	 Text / Goto
	 Shift + Text /
	 Shift + Zoom /
	 Rec / Rec Mode
	 Stop / Hold
	 Play / Slow
	 Subtitle / EQ
	 Exit / Cancel / Clear
	 D.Menu / Top
	 Info / Angle
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Display / Media
	 Pause / Step / Freeze
	 Audio / Lang I/II

Original	Replacement

