






 







 



 














 



 
 


 



 




 

 


 
 



 









Original		Replacement		Original		Replacement	
	Standby		Power		Up		Up
	Mute		Mute		Down		Down
	P/N		Smart		Right		Right
	Open/Close		Eject		Left		Left
	<<		<<		OK		Ok
	>>		>>		Vol+		Vol +
	Play		Play		Vol-		Vol -
	Pause		Pause		1		1
	Stop		Stop		2		2
	l<<		l<<		3		3
	>>l		>>l		4		4
	Setup		Options		5		5
	Source		AV		6		6
	Info		Info		7		7
	Return/Exit		Back		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0





Original		Replacement		Original		Replacement	
	Slow		Media				
	Program		Sleep				
	Title/TTX		Text				
	Audio		Dual				
	Subtitle		Subt				
	Red/Repeat		Red				
	Green/A-B		Green				
	Yellow/Menu		Yellow				
	Blue/Angle		Blue				
	Goto		Guide				
	Favorite		Pre Ch				
	Tv/Radio		TV/R				
	Rec		Rec				

