




 

 





 

 

 

 

 


 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Ch-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol+	 Right
 2	 2	 Vol-	 Vol -
 3	 3	 Vol-	 Left
 4	 4	 OK	 Ok
 5	 5	 Red/EPG	 Red
 6	 6	 Red/EPG	 Guide
 7	 7	 Yellow/Subtitle	 Yellow
 8	 8	 Yellow/Subtitle	 Subt
 9	 9	 Blue/TTX	 Text
 0	 0	 Blue/TTX	 Blue
 Menu	 Menu	 Green/Audio	 Green
 Exit	 Exit	 Green/Audio	 Dual
 Ch+	 Ch +	 i	 Info
 Ch+	 Up	 FAV	 Pre Ch
 Ch-	 Ch -	 TV/Radio	 TV/R





Original	Replacement	Original	Replacement
 Video	 Format		
 Prog	 Sleep		
 File	 Media		
 Device	 Smart		
 REC	 Rec		
 Zoom	 Eject		
 Stop	 Stop		
 Prev	 I<<		
 Next	 >>I		
 Play/Pause	 Play		
 Play/Pause	 Pause		
 <<	 <<		
 >>	 >>		

