



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Nicam		Dual
	Sleep		Sleep
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Aspect		Format
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Exit		Exit
	Menu		Menu
	Media		Media
	Play / Pause		Play





Original	Replacement
	Pause
	I<<
	>>I
	Rec
	Stop / Hold
	<< / Index
	>> / Size
	Text
	Pre Ch
	Shift + Down
	Shift + Up
	Smart
	Shift + Exit
	Shift + Subt
	Subt
	Red
	Green

Original	Replacement
	Yellow
	Blue

