













 


 


 
 







 



 




 
 
 

 
 



 


 
 

 





 



 







Original	Replacement	Original	Replacement
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [<<>>]	 Format
 0	 0	 TV/R	 TV/R
 Recall	 Pre Ch	 [i+] / [≡i]	 Info
 Source	 AV	 Text / [≡] / [≡] []	 Text
 Menu/DVD	 Menu	 Pause	 Pause
 Guide	 Guide	 Play / I/II	 Play
 [] [] [] []	 3D	 Play / I/II	 Dual









 



 



 







 




 






 

 
 

 
 
 


 
 
 
 

 



























 




Original	Replacement	Original	Replacement
 << / [≡○]	 <<		
 >> / [≡○]	 SETTINGS OPT Options		
 SUBTITLE >> / Subtitle	 AD SUBT Subt		
 SUBTITLE >> / Subtitle	 >>		
 ▲	 HOME SMART Smart		
 ■ / [≡□]	 Stop		
 ■■■ / [≡⇕]	 ZOOM ▲ Eject		
 ■■■ / [≡⇕]	 <<<		
 ■■■ / [⊖][≡X]	 >>>		
 ■■■ / [⊖][≡X]	 RETURN BACK Back		
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		










 
 
 







 

 


 
 




 


 
 
 

 
 
 

 


 





 


 





 


 
 









Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
 _ Menu/DVD	 TOP MENU MENU	  / [≡□]	 Stop
 - Exit/Back	 CLEAR EXIT	  / [≡⇅]	 Eject
 - Up	 Up	  / [≡⇅]	 I<<<
 Left	 Left	  / [⊙][≡X]	 >>>I
 OK	 OK	  / [⊙][≡X]	 Back





Original	Replacement	Original	Replacement
 Power	 Power	 	 Pause
 Mute	 Mute	 	 Play
 1	 1	 	 Dual
 2	 2	 	 <<
 3	 3	 	 TV/R
 4	 4	 	 >>
 5	 5	 	 Subt
 6	 6	 ▲	 Smart
 7	 7	 ■ / [≡] button	 Stop
 8	 8	 	 Eject
 9	 9	 	 I<<
 0	 0	 	 Back
 Source	 AV	 	 >>I
 P+	 Ch +		
 P-	 Ch -		
 Vol-	 Vol -		
 Vol+	 Vol +		

