



Original	Replacement	Original	Replacement
Power	Power	CH MGR	Display / Media
TV	Smart / List	D.Menu	D.Menu / Top
TV	+ Shift + 1	Sleep	Sleep / Timer
Source	AV / Input / RDS	<< REW	<< / Tune-
1	1	<< REW	I<< / Preset-
2	2	Stop	Stop / Hold
3	3	Vol+	Vol+
4	4	>> FF	>>I / Preset+
5	5	>> FF	>> / Tune+
6	6	Play / Pause	Play / Slow
7	7	Play / Pause	Pause / Step / Freeze
8	8	Vol-	Vol-
9	9	Mute	Mute / Dimmer
0	0	P+	CH+ / Page+
-/--	+ Shift + Guide / EPG / -/--	P-	CH- / Page-
PRE-CH	Back / Return	Menu	Menu / Home
TV/DTV	TV/Radio /	Exit	Exit / Cancel / Clear



Program















 




 

 


 

 

 
 
Original	Replacement
Enter / OK	OK
Up	Up
Left	Left
Right	Right
Down	Down
Text / Mix	Text / Goto
Guide	Guide / EPG / -/--
Info	Info / Angle
Red	Red / Netflix / Search
Green	Green / APP / Repeat
PIP	Setup / OPT /
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
P.Mode	Picture / Format
S.Mode	Sound / Title
P.Size	Zoom / Size
SRS	Eject / Surround

Original	Replacement
Subtitle	Subtitle / EQ
Dual I-II	Audio / Lang I/II
Still	Shift + Pause / Step /





 












 











 

 

 





















 

 



 







 



Original	Replacement
 DVD	 Smart / List
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 << REW	 << / Tune-
 << REW	 I<< / Preset-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze

Original	Replacement
 >> FF	 >>I / Preset+
 >> FF	 >> / Tune+
 Stop	 Stop / Hold
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Enter / OK	 OK
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Info	 Info / Angle





Original	Replacement
 STB	 Smart / List
 STB	 +  3 Shift + 3
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Back / Return
 Sleep	 Sleep / Timer
 << REW	 << / Tune-

Original	Replacement
 << REW	 I<< / Preset-
 Play / Pause	 Pause / Step / Freeze
 >> FF	 >>I / Preset+
 Play / Pause	 Play / Slow
 >> FF	 >> / Tune+
 Stop	 Stop / Hold
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Enter / OK	 OK
 Left	 Left
 Right	 Right

 













 























Original	Replacement	Original	Replacement
	Down		Down
	Guide		Guide / EPG / -/--
	Info		Info / Angle





Original	Replacement
 Mute	 Mute / Dimmer
 CABLE Power	 Power
 CABLE	 Smart / List
 VCR	 Display / Media
 CABLE 1	 1
 CABLE 2	 2
 CABLE 3	 3
 CABLE 4	 4
 CABLE 5	 5
 CABLE 6	 6
 CABLE 7	 7
 CABLE 8	 8
 CABLE 9	 9
 CABLE 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 CABLE P-	 CH- / Page-

Original	Replacement
 CABLE P+	 CH+ / Page+
 VCR Power	 Shift + Power
 VCR Menu	 Menu / Home
 VCR Exit	 Exit / Cancel / Clear
 VCR 1	 Shift + 1
 VCR 2	 Shift + 2
 VCR 3	 Shift + 3
 VCR 4	 Shift + 4
 VCR 5	 Shift + 5
 VCR 6	 Shift + 6
 VCR 7	 Shift + 7
 VCR 8	 Shift + 8
 VCR 9	 Shift + 9
 VCR 0	 Shift + 0
 VCR P+	 Shift + CH+ /
 VCR P-	 Shift + CH- /
 VCR Up	 Up





Original	Replacement	Original	Replacement
	VCR Left		Left
	VCR Enter/OK		OK
	VCR Right		Right
	VCR Down		Down
	VCR Info		Info / Angle
	VCR Stop		Stop / Hold
	VCR << REW		<< / Tune-
	VCR << REW		I<< / Preset-
	VCR Play/Pause		Play / Slow
	VCR Play/Pause		Pause / Step / Freeze
	VCR >> FF		>> / Tune+
	VCR >> FF		>>I / Preset+

