 



 




 


 








 

 
 



 

 


 


 



 




 


 























	Original	Replacement		Original	Replacement
	Standby		Power		Recall
	Source		AV / Input / RDS		Menu
	Freeze		Pause / Step / Freeze		Exit
	P.Mode		Picture / Format		Up
	S.Mode		Sound / Title		Left
	TV / Radio		TV/Radio /		Enter
	1		1		Right
	2		2		Play / Pause
	3		3		Down
	4		4		Stop
	5		5		Vol +
	6		6		TXT
	7		7		CH +
	8		8		Vol -
	9		9		Mute
	Display		Display / Media		CH -
	0		0		Mix / Fav. List
					Back / Return
					Menu / Home
					Exit / Cancel / Clear
					Up
					Left
					OK
					Right
					Play / Slow
					Down
					Stop / Hold
					Vol+
					Text / Goto
					CH+ / Page+
					Vol-
					Mute / Dimmer
					CH- / Page-
					Fav / Marker / PC



