









 


 
 



 











 



 



 



 

 



 

 

 







 



 










Original	Replacement	Original	Replacement
 1	 1	 Left / Vol-	 Left
 2	 2	 Left / Vol-	 Vol-
 3	 3	 OK	 OK
 Power	 Power	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Mute	 Mute / Dimmer
 6	 6	 Menu / Setup	 Menu / Home
 TV/R	 TV/ Radio /	 Menu / Setup	 Setup / OPT /
 7	 7	 Down / CH-	 Down
 8	 8	 Down / CH-	 CH- / Page-
 9	 9	 Audio1 -	 << / Tune-
 EPG	 Guide / EPG / -/--	 Audio1 +	 >> / Tune+
 0	 0	 Set / Info	 Info / Angle
 Up / CH+	 Up	 Next / ESC	 Exit / Cancel / Clear
 Up / CH+	 CH+ / Page+	 Audio2 -	 I<< / Preset-
 A/D	 Sound / Title	 Audio2 +	 >>I / Preset+
 (<>) L	 Audio / Lang I/II	 Down	 Smart / List





Original	Replacement	Original	Replacement
 Stop / Recall	 Stop / Hold		
 Stop / Recall	 Back / Return		
 A/B / ADR	 Yellow / YouTube / Repeat		
 Memo	 Fav / Marker / PC		

