






 

 













 





 








Original	Replacement
 Power	 Power
 Auto	 Smart
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Aspect	 3D
 Audio	 Dual
 Display	 Info
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 FAV	 Pre Ch





Original	Replacement
	FAV- SHIFT + CH - Shift + Ch -
	FAV+ SHIFT + CH + Shift + Ch +
	GUIDE Guide
	TEXT Text
	OPT Options
	TV/R TV/R
	SUBT Subt
	LIST List
	D.MENU D. Menu
	EJECT Eject
	MEDIA Media
	FORMAT Format
	Play Play
	Pause Pause
	<< <<
	>> >>
	REC Rec

Original	Replacement
	Stop Stop
	I<< I<<
	>>I >>I
	Red Red
	Green Green
	Yellow Yellow
	Blue Blue

