



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Jump		Back
	-/--		Shift + Guide
	S.Mode		Shift + Dual
	I-II		Dual
	P.Mode		Format
	Guide		Guide
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Input		AV
	Menu		Menu
	Fav. CH		Pre Ch
	Vol. +		Vol +
	Vol.-		Vol -
	CH. +		Ch +
	CH.-		Ch -
	Rec		Rec
	DTV / Radio		TV/R
	Sleep		Sleep



