



Original	Replacement	Original	Replacement
Power	Power	Blue	Blue / Prime Video / Random
Mute	Mute / Dimmer	Source	AV / Input / RDS
1	1	Vol+	Vol+
2	2	Vol-	Vol-
3	3	CH+	CH+ / Page+
4	4	CH-	CH- / Page-
5	5	Audio	Audio / Lang I/II
6	6	Aspect	Eject / Surround
7	7	Display	Display / Media
8	8	Tv/Radio	TV/Radio /
9	9	Rec	Rec / Rec Mode
0	0	Up	Up
-/--	Shift + Guide / EPG / -/--	Left	Left
Recall	Back / Return	OK/CH List	OK
Red	Red / Netflix / Search	Right	Right
Green	Green / APP / Repeat	Down	Down
Yellow	Yellow / YouTube / Repeat	Menu	Menu / Home

Original	Replacement	Original	Replacement
Power	Power	Blue	Blue / Prime Video / Random
Mute	Mute / Dimmer	Source	AV / Input / RDS
1	1	Vol+	Vol+
2	2	Vol-	Vol-
3	3	CH+	CH+ / Page+
4	4	CH-	CH- / Page-
5	5	Audio	Audio / Lang I/II
6	6	Aspect	Eject / Surround
7	7	Display	Display / Media
8	8	Tv/Radio	TV/Radio /
9	9	Rec	Rec / Rec Mode
0	0	Up	Up
-/--	Shift + Guide / EPG / -/--	Left	Left
Recall	Back / Return	OK/CH List	OK
Red	Red / Netflix / Search	Right	Right
Green	Green / APP / Repeat	Down	Down
Yellow	Yellow / YouTube / Repeat	Menu	Menu / Home





Original		Replacement	
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	PVR/Hold		Setup / OPT /
	Size		Zoom / Size
	FAV		Fav / Marker / PC
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Auto		Stop / Hold
	Reveal		D.Menu / Top
	Subtitle		Subtitle / EQ
	<</Nicam		<< / Tune-
	>>/Freeze		>> / Tune+
	I<</Index		I<< / Preset-

Original		Replacement	
	>>I/Subpage		>>I / Preset+

