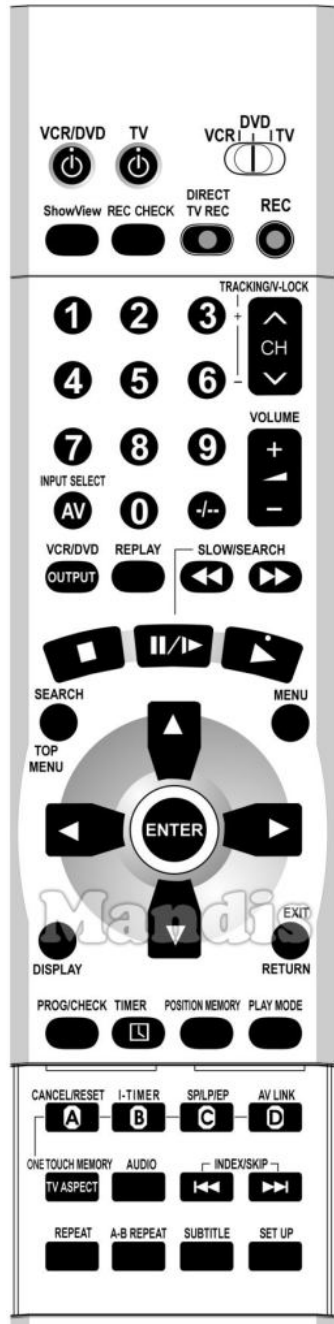


Original	Replacement
Power DVD	Power
Rec Check	Rec
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Guide
CH+ / Tracking/V-Lock +	Ch +
CH- / Tracking/V-Lock -	Ch -
AV / Input Select	AV
Output DVD	Media

Original	Replacement
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause / Step	Pause
Play	Play
Top Menu	D. Menu
Menu	Menu
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Display	Info
Return	Back
Timer	Shift + AV
Play Mode	Shift + Play
Position	Pre Ch

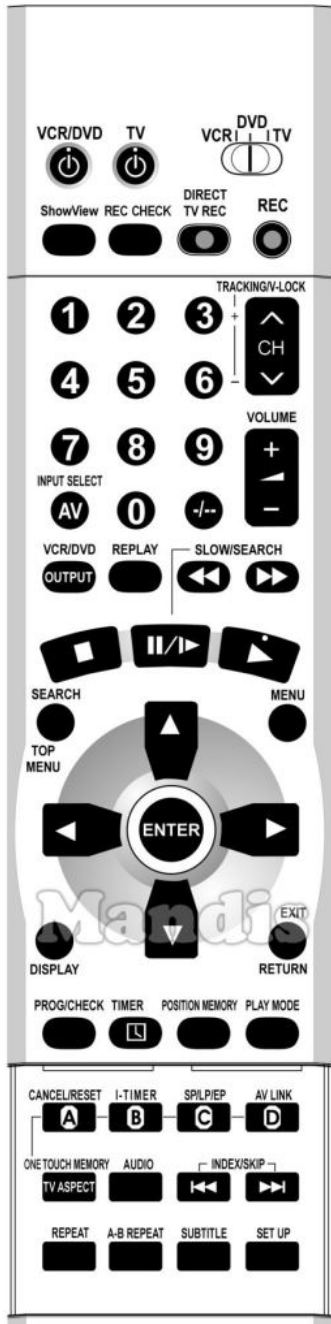



 












 

 







 

 

 




Memory





 

 



 























Original	Replacement	Original	Replacement
REPLAY	Replay	DISC NAV LIST	List
CANCEL/RESET	A / Cancel/Reset	A	Red
I-TIMER	B / I-Timer	B	Green
SPIL/PEP	C / SP/LP/EP	C	Yellow
AV LINK	D / AV Link	D	Blue
ONE TOUCH MEMORY TV ASPECT	One Touch	HOME SMART	Smart
AUDIO	Audio	SOUND DUAL	Dual
I<< INDEX/SKIP	I<< Index/Skip	I<<	I<<
INDEX/SKIP >>I	Index/Skip >>I	>>I	>>I
REPEAT	Repeat	REPEAT TEXT	Text
A-B REPEAT	A-B Repeat	SHIFT + REPEAT TEXT	Shift + Text
SUBTITLE	Subtitle	AD SUBT	Subt
SET UP	Setup	SETTINGS OPT	Options





Original	Replacement
 Power VCR	 Power
 ShowView	 Smart
 Rec Check	 Options
 Direct TV Rec	 Shift + Rec
 Rec	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Guide
 CH+ / Tracking/V-Lock +	 Ch +

Original	Replacement
 CH- / Tracking/V-Lock -	 Ch -
 AV / Input Select	 AV
 Output VCR	 Media
 Replay	 List
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause / Step	 Pause
 Play	 Play
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Exit	 Exit



