































































 







Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Mute	 Mute / Dimmer	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Vol+	 Vol+
 5	 5	 Left	 Left
 6	 6	 Vol-	 Vol-
 7	 7	 TV/TX	 Text / Goto
 8	 8	 PP	 Fav / Marker / PC
 9	 9	 16:9	 Setup / OPT /
 0	 0	 Red	 Red / Netflix / Search
 Guide / EPG / -/--	 Guide / EPG / -/--	 Green	 Green / APP / Repeat
 AV	 AV / Input / RDS	 Yellow	 Yellow / YouTube / Repeat
 Menu	 Menu / Home	 Blue	 Blue / Prime Video / Random
 Swap	 Back / Return	 Violet	 Display / Media
 OK	 OK	 [] Smart Controls	 Picture / Format





Original	Replacement	Original	Replacement
Smart Controls	Sound / Title		
MIX/))·((Audio / Lang I/II		
P100/PAT	Sleep / Timer		
SUB	Subtitle / EQ		
Update	Zoom / Size		
Hold	Stop / Hold		
Doub/Freeze	Eject / Surround		
REV/Scan	TV/Radio /		

