
 





 

 
 
 
 


 















 

 



Original	Replacement	
On/Off		Power
Mute		Mute
Info		Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down

Original	Replacement	
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide
0/10		0



Original	Replacement	Original	Replacement
Red	 A	Red	
Green	 B	Green	
Yellow	 C	Yellow	
Blue	 D	Blue	

