





















































































Original	Replacement	Original	Replacement
On/Off	 Power	Progr/C/CH	 TV/Radio /
Audio Out	 Mute / Dimmer	Counter Reset	 D.Menu / Top
Play	 Play / Slow	T.Set/Clock	 Setup / OPT /
Pause	 Pause / Step / Freeze	Video/Go-To	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info/Intro	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Audio Dub	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Exit	 Exit / Cancel / Clear
Auto/Track	 Subtitle / EQ	Menu Down	 Down
Vps/Pdc	 Eject / Surround	Next Sv+V	 Back / Return
Encode	 Picture / Format	VCR/TV	 Smart / List
Counter Clock	 Zoom / Size	Frame Up	 CH+ / Page+
Timer/Sleep	 Sleep / Timer	Slow Down	 Vol-



Original	Replacement	Original	Replacement
Display	 Display / Media	On/Off	 Shift + Power
Frame Down	 CH- / Page-	Tracking-	 Shift + << /
1	 1	Tracking+	 Shift + >> /
2	 2	Slow/Dpss-	 Shift + I<< / Preset-
3	 3	Slow/Dpss+	 Shift + >>I / Preset+
4	 4	Store	 Shift + Picture / Format
5	 5	Counter/Memor	 Shift + Zoom /
6	 6	Timer/Record	 Shift + Sleep / Timer
7	 7	Sp/Lp/Speed	 Shift + OK
8	 8	X2 Rew/PlayInfo/Intro	 Shift + Right
9	 9	Case Tape	 Shift + 5
-/--	 Guide / EPG / -/--	Search Index	 Shift + Red / Netflix /
0	 0		
Skip/Search	 Red / Netflix / Search		
Repeat	 Green / APP / Repeat		
F.Adv	 Yellow / YouTube / Repeat		
Mon/TV	 Blue / Prime Video / Random		

Original	Replacement	Original	Replacement
On/Off	 Shift + Power	Tracking-	 Shift + << /
Tracking-	 Shift + << /	Tracking+	 Shift + >> /
Tracking+	 Shift + >> /	Slow/Dpss-	 Shift + I<< / Preset-
Slow/Dpss-	 Shift + I<< / Preset-	Slow/Dpss+	 Shift + >>I / Preset+
Slow/Dpss+	 Shift + >>I / Preset+	Store	 Shift + Picture / Format
Store	 Shift + Picture / Format	Counter/Memor	 Shift + Zoom /
Counter/Memor	 Shift + Zoom /	Timer/Record	 Shift + Sleep / Timer
Timer/Record	 Shift + Sleep / Timer	Sp/Lp/Speed	 Shift + OK
Sp/Lp/Speed	 Shift + OK	X2 Rew/PlayInfo/Intro	 Shift + Right
X2 Rew/PlayInfo/Intro	 Shift + Right	Case Tape	 Shift + 5
Case Tape	 Shift + 5	Search Index	 Shift + Red / Netflix /
Search Index	 Shift + Red / Netflix /		

